



Volkswagen/Rover JF506E 01+ Overdrive (Low) Drum Saver®

ALTO PART # 162757


Alto # 162757 KIT CONTENTS:

- (6) 162704-170 Friction Plates (.068" / 1.73mm)
- (5) 162705-140 Steel Plates (.055" / 1.40mm)
- (1) 162768X Wave Cushion Spring (.055" / 1.40mm)

INSTALLATION INSTRUCTIONS

Install the 162768X wave plate directly on top of the apply piston, and then starting with a steel plate alternately install steel and friction plates ending with a friction plate. Install the top backing plate and snap ring.

Use the "rule of thumb" for clutch pack clearance of .008" to .012" per friction plate.

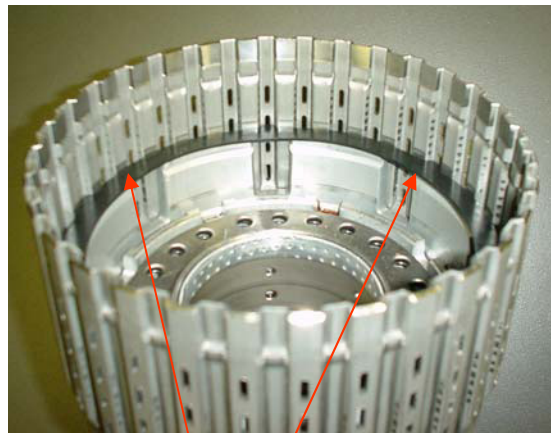

Alto 162768X Wave Spring in Place

Be sure to pre-soak all of your friction plates for a minimum of 1 hour before installation. Always apply the clutch pack several times using regulated shop air to make sure you have no apply piston problems.